



Dell Inspiron 6000 RAM Replacement

Dell Inspiron 6000 RAM upgrade or replacement

Written By: Kenneth Odum



INTRODUCTION


Accessing the RAM in this laptop is fairly simple and requires little disassembly.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

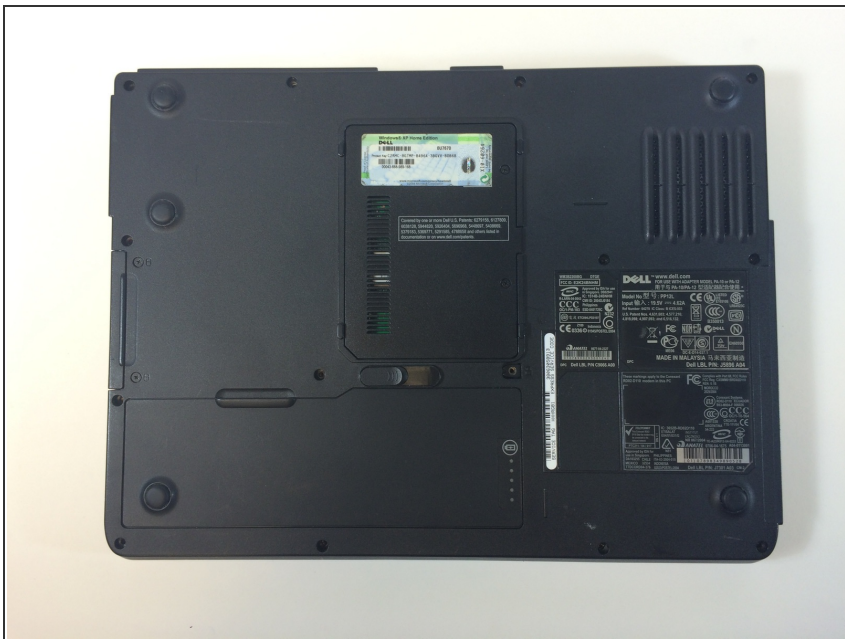

⚠ To prevent injury, make sure the laptop is unplugged before removing the battery.


- Flip the laptop over, bottom-side up.

Step 2



- Push the switch next to the battery.
- At the same time, lift the battery away from the laptop.

Step 3 — RAM

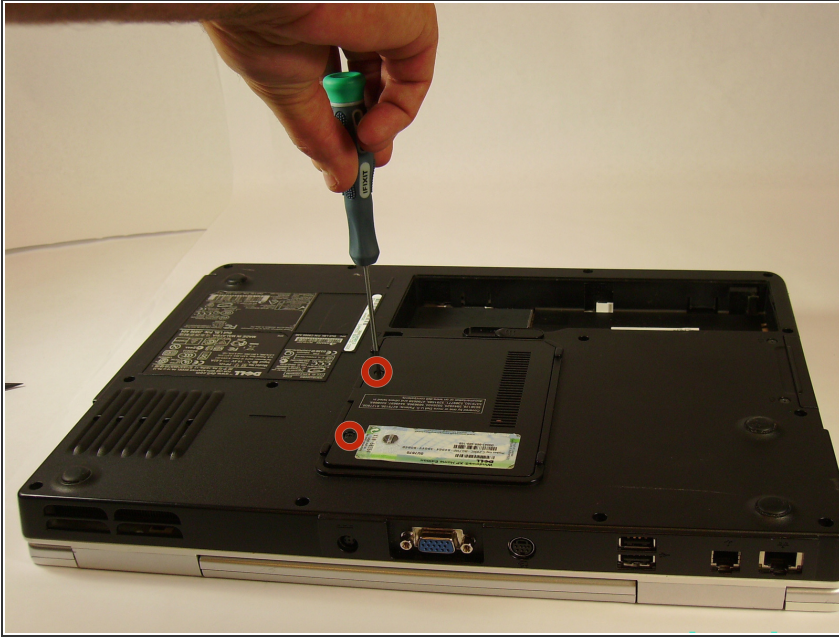

- Unscrew two 4 mm Philips #00 screws.
- Remove the RAM door panel.

Step 4



- Pull the tabs located at red circles apart in order to separate the ram from its housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 01:32:56 AM.